

SYSTEM CHART

Page 1 of 3 Updated November 2009

ROCKCOTE Reinforced Render (RRR) System for QRender PM100 Application over Pre-meshed Polystyrene - (including Thermawall & Koolwall)

Surface Preparation

Substrate must be dry, clean and free of dust, dirt, oil, salt, mould or any other contamination and fixed as per RRR System Installation Manual & manufacturers' specifications.

Apply ROCKCOTE Keycote by trowelling or bagging, leaving the surface rough to provide a suitable key for QRender PM100 application.

Colour

Only colours with a Light Reflectance Value (LRV) of 25% or higher are suitable for use over insulation board systems

Please read all relevant Technical Data Sheets & Material Safety Data Sheets prior to product use.

PERFORMANCE CODE 5

Finish	1st Step	2nd Step **	3rd Step	4th Step	5th Step
Finecote	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	1mm Finecote *	Armour Plus	Armour Plus
Quicksand	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Quicksand	Armour Plus	Armour Plus
Sandcote	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Sandcote	Armour Plus	Armour Plus
Santa Fe	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Santa Fe	Armour Plus	Armour Plus
Santini	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	1mm Santini *	Armour Plus	Armour Plus
Sponge Finish	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Polymer Render	Armour Plus	Armour Plus
Trowel-On	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Trowel-On	Armour Plus	Armour Plus

* ROCKCOTE Finecote & Santini may require two applications to achieve 1mm dry film build.

** Depending on how straight the cladding is, this step may be eliminated with mesh embedded into the Keycote

PERFORMANCE CODE 4

ROCKCOTE Performance Code 5 System is applicable for Pre-meshed Polystyrene, due to the level of build required over the substrate.

SYSTEM CHART

PERFORMANCE CODE 3

Finish	1st Step	2nd Step **	3rd Step	4th Step	5th Step
Finecote	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	1mm Finecote *	Armour Flex	n/a
Quicksand	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Quicksand	Armour Flex	n/a
Sandcote	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Sandcote	Armour Flex	n/a
Santa Fe	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Santa Fe	Armour Flex	n/a
Santini	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	1mm Santini *	Armour Flex	n/a
Sponge Finish	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Polymer Render	Armour Flex	n/a
Trowel-On	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Trowel-On	Armour Flex	n/a

* ROCKCOTE Finecote & Santini may require two applications to achieve 1mm dry film build.

** Depending on how straight the cladding is, this step may be eliminated with mesh embedded into the Keycote


PERFORMANCE CODE 2

Finish	1st Step	2nd Step **	3rd Step	4th Step	5th Step ***
Finecote	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Texprime	1mm Finecote *	ROCKCOTE Repel or Clearcote
Quicksand	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Texprime	Quicksand	ROCKCOTE Repel or Clearcote
Sandcote	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Texprime	Sandcote	ROCKCOTE Repel or Clearcote
Santa Fe	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Texprime	Santa Fe	ROCKCOTE Repel or Clearcote
Santini	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Texprime	1mm Santini *	ROCKCOTE Repel or Clearcote
Trowel-On	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Texprime	Trowel-On	ROCKCOTE Repel or Clearcote

* ROCKCOTE Finecote & Santini may require two applications to achieve 1mm dry film build.

** Depending on how straight the cladding is, this step may be eliminated with mesh embedded into the Keycote

*** This step is optional. For extra durability, the application of ROCKCOTE Clearcote or ROCKCOTE Repel is recommended. ROCKCOTE Clearcote provides a satin finish, whilst ROCKCOTE Repel provides a natural look.

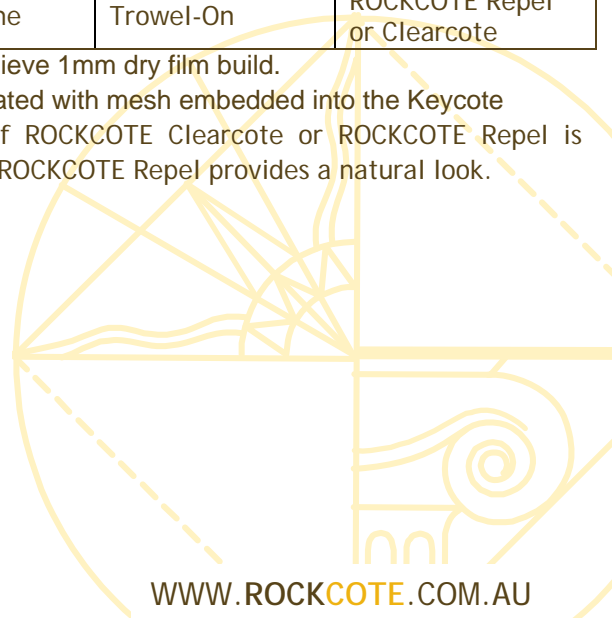

SYSTEM CHART

PERFORMANCE CODE 1

Finish	1st Step	2nd Step	3rd Step	4th Step	5th Step
Render Paint Fine	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Polymer Render	Render Paint Fine	Render Paint Fine
Render Paint Flat	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Polymer Render	Render Paint Flat	Render Paint Flat
Torino	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Polymer Render	Torino	Torino
Toscani	ROCKCOTE Keycote	4-8mm QRender PM100 & Mesh	Polymer Render	Toscani	Toscani

* ROCKCOTE Finecote & Santini may require two applications to achieve 1mm dry film build.

Indemnity

ROCKCOTE Enterprises Pty Ltd will not accept responsibility for any misuse of this product or if not applied by a skilled and experienced applicator and in accordance with our technical specifications. Due to our policy of continuing product improvement ROCKCOTE Enterprises Pty Ltd reserves the right to change these specifications without further notice.

